

SignLine Express Banner Stand Graphic Attachment Instructions

Graphic Attachment Instructions

Step One: Attach top rear of graphic panel to double sided tape on graphic hanger bar. (Diag. A)

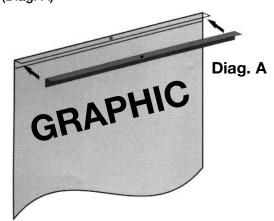


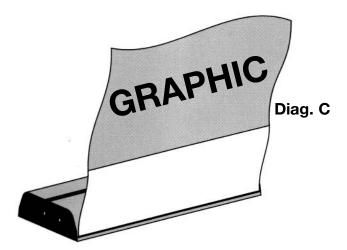

Step Three: Use a standard flat headed screwdriver to wind graphic into unit. We recommend between 20 and 24 complete clockwise turns to achieve optimum tension, although this may vary (+ / -) with different styles of graphic materials. (Diag. D)



Step Two: Attach front bottom edge of graphic panel to double sided tape on leader sheet, as shown. (Diags. B&C)

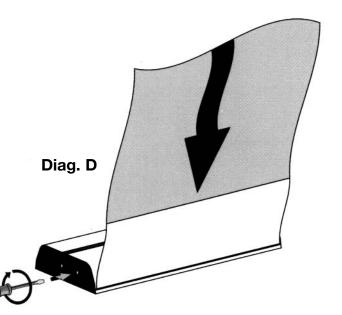

To untension graphic panel place screwdriver into slot and push to disengage ratchet. Hold in and turn counter-clockwise until tension in spring is released. To remove graphic panel carefully peel it off leader sheet. The graphic hanger may be removed or replaced.



Nomadic SignLine [™]

Assembly Instructions

